


5. Set parameters with SmartLogger & App


APP - Connect and overview:

- Use Android smartphone
- Inverter 33KTL-A/36KTL/60KTL/100KTL/185KTL Connection possible via Bluetooth USB stick or via USB smartphone charging cable
- Connection 3...20KTL-M0: via integrated WLAN (configuration also possible without SmartDongle)

1. Launch App Fusion Solar,
2. Log in to the portal (without Internet - e.g. in flight mode - the device commissioning can also be started without logging in under 'Help')
3. Select device commissioning
4. Scan barcode via mobile camera
5. Connect to the inverter
6. Log in as "Installer". Inverter password: 00000a

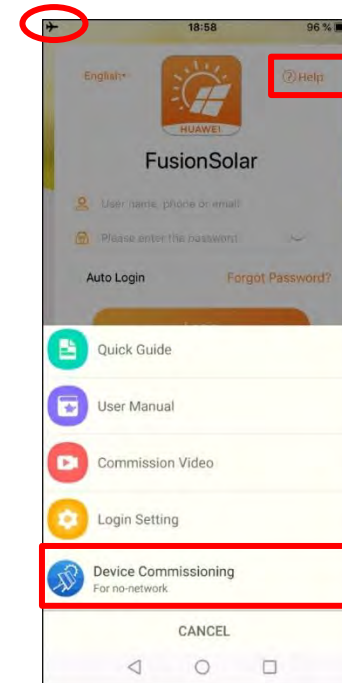

Device commissioning possible without logging in when starting the app in flight mode

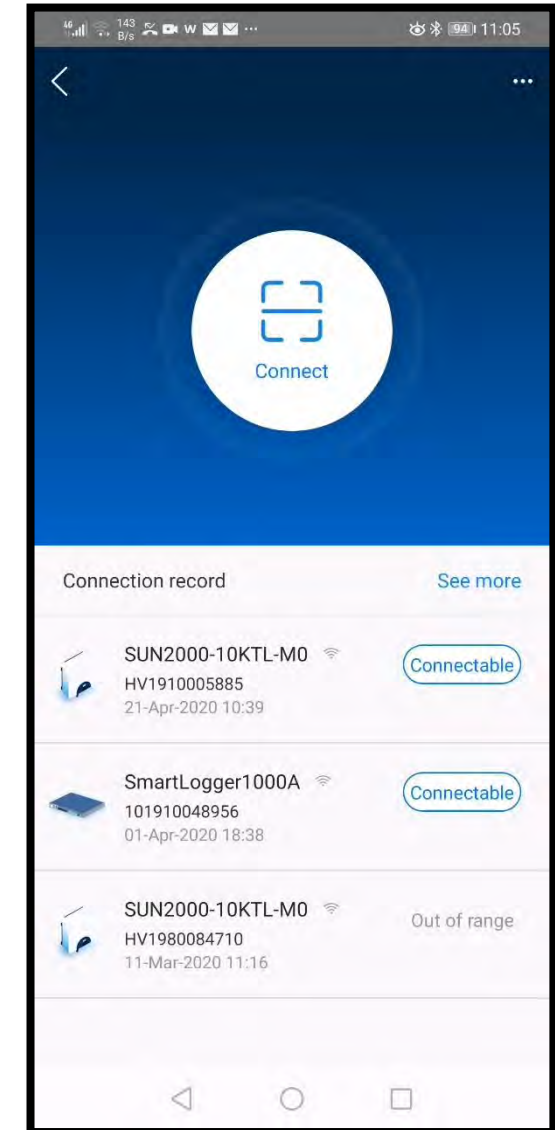


5. Einführung Parametrierung mit Smartlogger & App

APP - Inverter commissioning:

Commissioning in 4 steps.

Essentially, the specified values only need to be checked.

1. setting the basic parameters

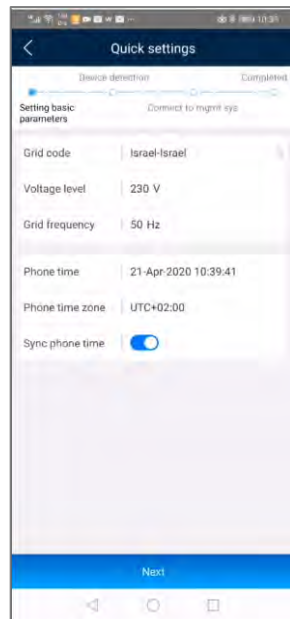



2. Device detection



3. Connect to management system



4. Completed

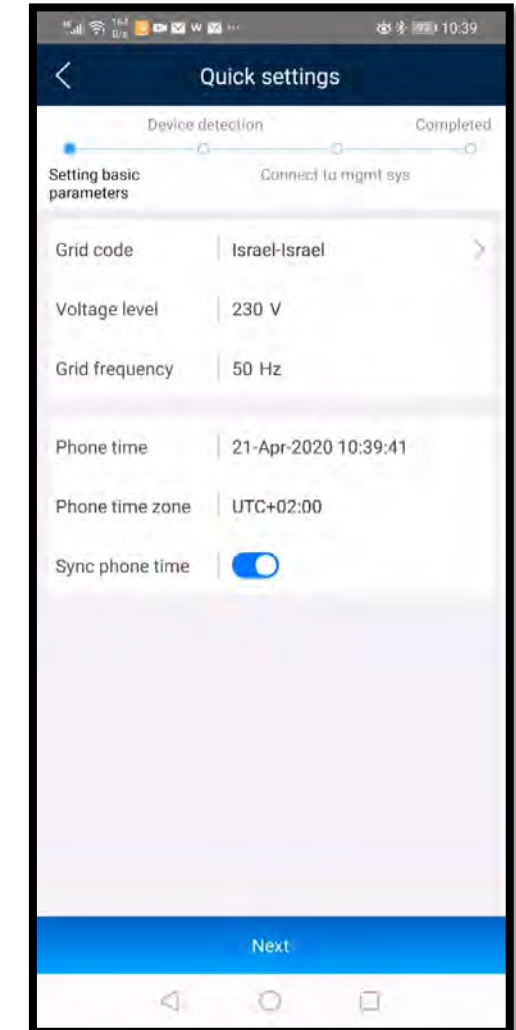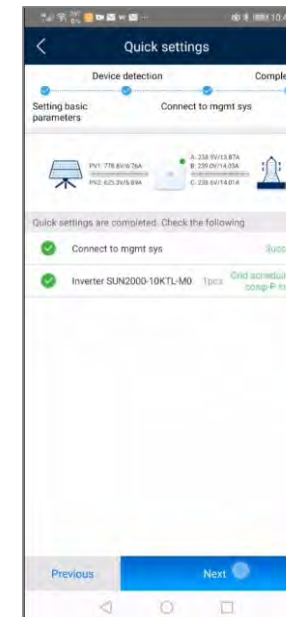

5. Einführung Parametrierung mit Smartlogger & App

APP - Inverter detail:

All further details can be set here

Menu functions

- Alarm management: display of active and historical alarms
- Quick settings: Restart the Start-up Wizard
- Device monitoring: Current power, measured values
- Maintenance: Log-file
- Power adjustment: adjustment of the total generated energy

